



**USER
MANUAL**

LAUNCH CONTROL

1

LAUNCH CONTROL IS AVAILABLE IN VERSION 1.3 AND HIGHER

TO ENTER LAUNCH CONTROL

PRESS AND HOLD 1 2 BUTTONS



2

1. CONFIRMATION
2. ENABLE OR DISABLE
3. SET ENCODER
 - TURN LEFT TO DECREASE
 - TURN RIGHT TO INCREASE
4. LEFT CLUTCH PEDAL – FULL VALUE
5. RIGHT CLUTCH PEDAL – TO VALUE



3

ENABLED – ONE Z AXIS

DISABLED – TWO STANDARD AXES

