


## Custom Wheel for Thrustmaster Wheel Hubs



### Installation Instructions

This guide will take you step by step through the installation of your new wheel to fit on the GTE, TM28 and 599XX EVO add-on wheel rim hubs.

**CAUTION:** Be careful to avoid static build-up while handling the electronics in your wheel. Ricmotech is not responsible for any damage you may cause to your wheel.

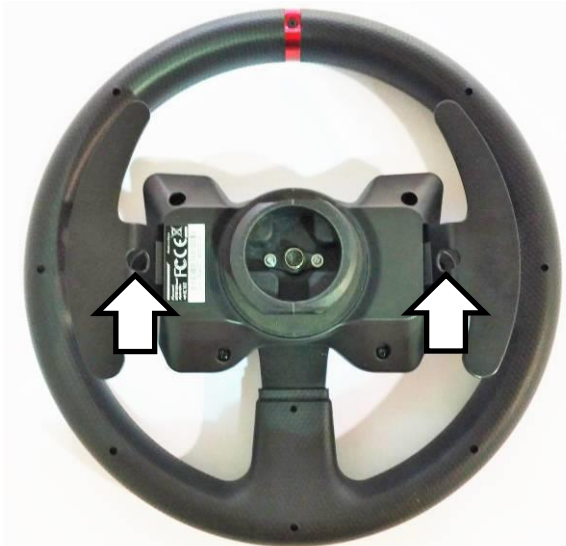

Begin by removing the 2 screws accessible through the openings in the paddles.



Remove the 3 or 6 screws securing the original wheel to the hub.



Trim the locating posts down flush with the plastic tab as shown.



Carefully reposition the D-Pad and grounding spring if they have become dislodged.



Mount your steering wheel with the 3 LONG screws where indicated by the arrows. If your original wheel had six screws then use the SHORT screws provided in the remaining holes.

### Need Help?

If you run into any problems during the installation of the wheel, please contact us directly at technical support at (305) 417-9241 or via email at [mail@ricmotech.com](mailto:mail@ricmotech.com).

Due to constant improvements to our products, the product you receive may vary slightly from the product shown in the illustrations.

Copyright 2016, Ricmotech LLC. Thrustmaster® is a trademark of the Guillemot® company and the terms are used for reference purposes only. Ricmotech LLC is not affiliated with Thrustmaster®.